



Flintstones Tote Bag



Approximate size 9¾" x 11" x 3"



25664-SO
¼ yard



25666-SP
1 yard

Flintstones Tote Bag

Approximate size 9¾" x 11" x 3"


Materials:

- ¼ yard 25664-SO – outside of tote
- 1 yard 25666-SP – strap and inside
- 1 yard iron-on interfacing
- 2¼" x 10½" piece of cardboard

Instructions: *use 3/8" seam allowance unless otherwise indicated

Cutting: Draw and cut all pieces as per layout.

LAYOUT

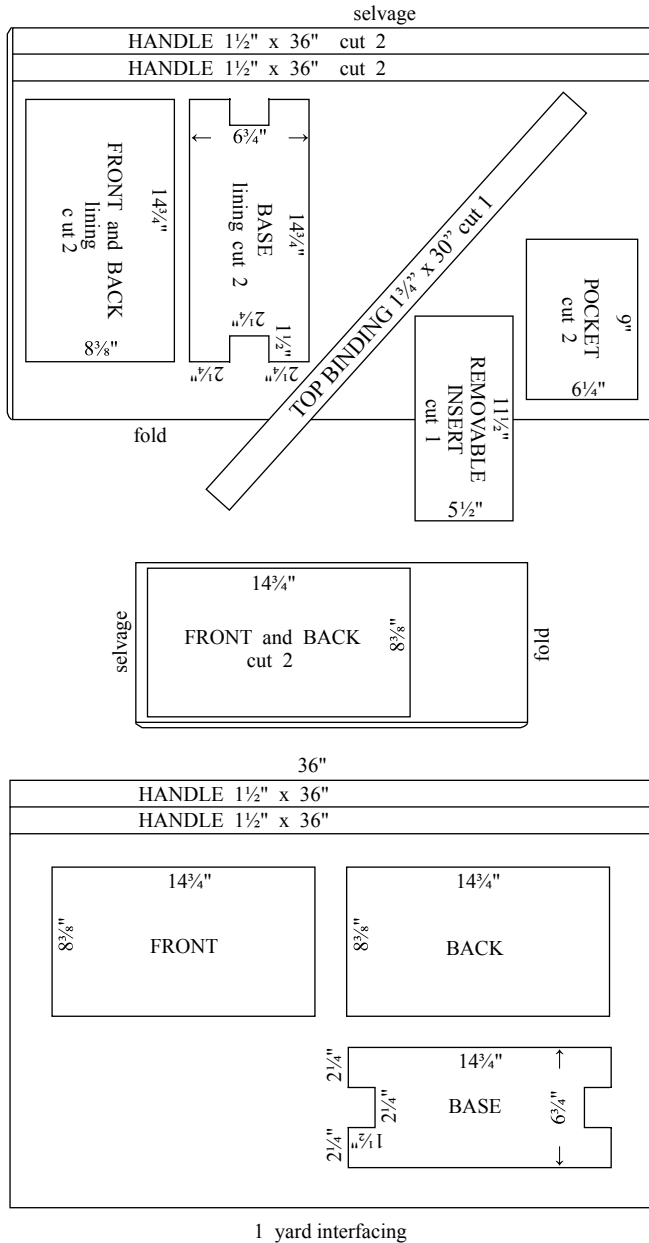

Preparation: Apply interfacing using manufactures directions to the wrong side of the front, back and handles.

Sewing:

Inside Pocket: Press under ¼" on upper edge of pocket. Press again to form a 1" hem and topstitch. Press under sides of pocket. Center pocket onto right side of lining and topstitch. Baste along raw bottom edges. Repeat pocket for opposite side. (Figure 1)

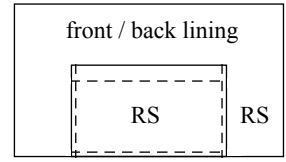


Figure 1

Handles: With right sides together sew long edges of handles using ¼" seam allowance. Turn to right side, press. Topstitch ⅛" from edge stopping 6" from each end. Position handles over the bag front and back panels. Topstitch in place stopping 1½" from the top bag edge. Reinforce with an X pattern. (Figure 2)

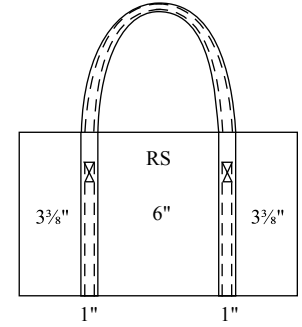


Figure 2

Bag Assembly: With the right sides together sew front and back lining pieces along side seams. Repeat for front and back interfaced pieces. Fold base in half with right sides together and sew side seams of the base. Unfold base and fold side seams inward to align with center fold line. Stitch across each end. Turn base piece so it is right side out. Repeat for base lining. (Figure 3)

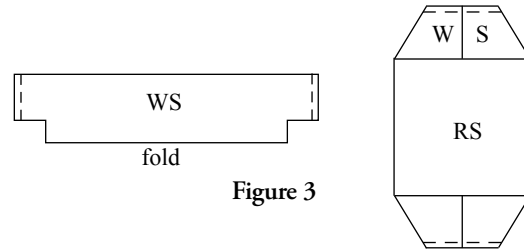


Figure 3

With right sides together sew top base, matching side seams. Repeat attaching lining to base lining. Press seam upward. (Figure 4)

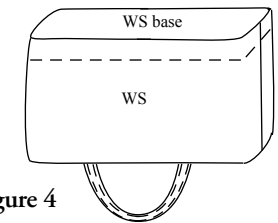


Figure 4

Turn bag right side out, then place lining inside of bag with wrong sides together. Baste top raw edges together.

Enclose Top Edge with Binding: Press under ¼" along one long edge and one short end of binding. Start with folded short end. With right sides together, sew raw edge of binding to top raw edges of bag, starting at side seam. Overlap ends 1" to complete circle. Trim excess. Wrap binding over top raw edge to inside of bag, folding along center of binding. Topstitch through all layers, being sure to catch the under side of binding.

Removable Base Protector: With right sides together fold along long edge and stitch across bottom and one side. Turn to right side. Cut cardboard to fit and slip inside. Fold edge under and stitch across opening.

While all possible care has been taken to ensure the accuracy of this pattern, we are not responsible for printing errors or the way in which individual work varies.